

## FACILE SMART

*Thank you for choosing a MELICONI remote control.*

The **FACILE SMART** replacement remote control was designed as a TV control. Thanks to its large database and numerous functions it is ideal for replacing any lost, defective or broken remote control.

Its ergonomic form and casing in soft rubber make it easy to grip and protect it against falls and bumps. The large keys are easy to see and to use.

**Keep this booklet in case you ever need to consult us in the future.**  
**For anyone with internet, via the website [www.meliconi.com/guide](http://www.meliconi.com/guide),**  
**it is even easier and quicker to programme the remote control**  
**and discover all the potential of the FACILE SMART thanks to the on-line guide.**

### USING THE KEYS AND FUNCTIONS

*The functions described below are only available if they are already foreseen by your TV.*



### PREPARE FOR USE

**Read these instructions carefully before programming your remote control!!**

## FITTING THE BATTERIES

**Before programming and using the remote control, fit the batteries.**

The remote control requires 2 new **AAA/LR03** batteries. Insert the batteries as shown:

- Change the batteries if the light indicator starts to flash during use. The batteries are low.
- When you remove the batteries, fit the new ones within 5 minutes or you may have to reprogramme your remote control.
- Make a note of the code for your TV on the adhesive label inside the battery cover in case you have to reprogramme your remote control.



 
## HOW TO PROGRAMME THE REMOTE CONTROL

**The quickest and easiest way to programme the remote control is by consulting the website [www.meliconi.com/guide](http://www.meliconi.com/guide).**

1. Switch on the TV.
2. Look for the brand of your TV in the Code Book and make a note of the corresponding code indicated alongside (e.g. Philips 0025).
3. Hold down the **MUTE** and **ON/OFF** keys together for 5 seconds until the light indicator starts to flash indicating that the remote control is being programmed.
4. Release the keys and within 12 seconds enter the make code previously identified (e.g. 0025). The light indicator flashes more quickly to indicate that the remote control is ready for the search.
5. Point the remote control at the TV. Press and slowly release the **ON/OFF** key several times, **stopping** when the TV goes off.
6. When the TV goes off, press the **OK** key to confirm. **Three flashes** indicate that the operation has been completed correctly.

PHILIPS

0025



### ADDITIONAL CHECK

Check that some of the other functions used on your original remote control are working correctly. If the commands function incorrectly or erratically, you have probably entered a code for a similar remote control but not the right one. In this case, repeat the search procedure starting from **point 3**, entering the code previously used (e.g. 0025).

**To display and make a note of the code memorized by means of the search, follow the instructions described in the paragraph CURRENT CODE DISPLAY.**

**N.B. THE LIGHT INDICATOR STOPS FLASHING.**

The remote control exits programming mode and the light indicator stops flashing:

- if no keys are pressed for 14 seconds
- if an invalid brand code is entered
- if the end of the code search list has been reached. In this case, consult our website [www.meliconi.com/guide](http://www.meliconi.com/guide)

**GLOBAL SEARCH REMOTE CONTROL PROGRAMMING**

This operation can take up to 20 minutes and should be carried out if you have not succeeded in programming the remote control by means of the method described above.

**The quickest and easiest way to programme the remote control is by consulting the website [www.meliconi.com/guide](http://www.meliconi.com/guide).**

1. Switch on the TV.

2. Hold down the **MUTE** and **ON/OFF** keys together for 5 seconds until the light indicator starts to flash indicating that the remote control is being programmed.



 
3. Release the keys and enter the code **0000** within 12 seconds. The light indicator flashes more quickly to indicate that the remote control is ready for the search.



4. Point the remote control at the TV. Press and slowly release the **ON/OFF** key several times, **stopping** when the TV goes off.



5. When the TV goes off, press the **OK** key to confirm. **Three flashes** indicate that the operation has been completed correctly.



**ADDITIONAL CHECK**

Check that some of the other functions used on your original remote control are working correctly. If the commands function incorrectly or erratically, you have probably entered a code for a similar remote control but not the right one. In this case, repeat the search procedure starting from **point 2**.

**To display and make a note of the code memorized by means of the search, follow the instructions described in the paragraph CURRENT CODE DISPLAY.**

**N.B. THE LIGHT INDICATOR STOPS FLASHING.**


The remote control exits programming mode and the light indicator stops flashing:

- if no keys are pressed for 14 seconds
- if the end of the code search list has been reached. In this case, consult our website [www.meliconi.com/guide](http://www.meliconi.com/guide)

## CURRENT CODE DISPLAY

To find out the code of your remote control, follow this procedure:

1. Hold down the **MUTE** and **ON/OFF** keys together for 5 seconds until the light indicator starts to flash.
2. Release the **MUTE** and **ON/OFF** keys and press and release the **1-/-** key within 8 seconds.
3. After a few seconds, the light indicator communicates the code you are looking for by flashing the four numbers separately. Count the number of flashes; each series of flashes corresponds to one figure in the code. **10 flashes correspond to 0**.
4. Make a note of the code on the adhesive label inside the battery cover for quick and easy future reprogramming.

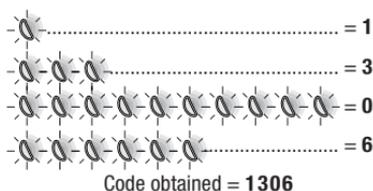

**N.B. this operation cannot be interrupted and the remote control cannot therefore be used until the end of the 4 series of flashes.**

## ENTERING THE CODE

If you know the exact code with which to programme the remote control, enter it as follows:

1. Hold down the **MUTE** and **ON/OFF** keys together for 5 seconds until the light indicator starts to flash.
1. Release the keys and enter the code (e.g. TV 1100). **Three flashes** indicate that the operation has been completed correctly.



## HOW TO USE THE ADDITIONAL COMMANDS WHICH DO NOT APPEAR ON THE KEYPAD

**Although not indicated on the keypad, some keys can be used for additional commands.**

Find them on your **FACILE SMART** remote control by pressing the keys one by one and discovering the commands that interest you..

In particular, the additional functions most frequently used, such as **NORMALIZATION**, **COLOUR** and **BRIGHTNESS**, can be found on the following keys:

Normalization:



Brightness (+):



or



green

Brightness (-):



or



red

Colour (+):



or



blue

Colour (-):



or



yellow

For the functions used less frequently, look for the additional commands on the site [www.meliconi.com/guide](http://www.meliconi.com/guide). As well as easily finding the code to programme your remote control, consult the **on-line guide** to help you to find which keys on the **FACILE SMART** remote control correspond to the additional commands.

## PROBLEM SOLVING

### PROBLEM

*The TV does not respond and the light indicator does not light up when a key is pressed.*

*The TV does not respond but the light indicator does light up.*

*The light indicator flashes when a key is held down but the TV does not respond.*

*The remote control commands are not all working correctly.*

*The code for your appliance make is not in the Code Book.*

### SOLUTION

Try some of the other frequently-used keys. If the problem persists, check that the batteries are fitted correctly. If necessary, replace them with 2 new 1.5 V **AAA/LR03** batteries.

Check that the batteries are new and that the remote control is pointing at the TV without any obstacles in the way. If required, reset the remote control code, following the programming procedure.

The batteries are low. Change them.

You may have used the wrong code. Reset the remote control code, following the programming procedure.

To find the code with which to programme your remote control consult the **on-line guide** at **[www.meliconi.com/guide](http://www.meliconi.com/guide)**

## INFO-LINE

### ***If you have any queries about your FACILE SMART remote control:***

- read this Instruction Booklet carefully - you will find an answer to most of your questions
- consult the website **[www.meliconi.com/guide](http://www.meliconi.com/guide)** where you will find the answers you need easily and quickly.

### **WARRANTY: 2 years**

The warranty ceases to be valid if the product is tampered with or used incorrectly.

Remote control type **GumBody**  
Model **FACILE SMART**

Purchase date \_\_\_\_ / \_\_\_\_ / \_\_\_\_

Dealer's stamp



The symbol of the crossed trash can shown on the remote control indicates that once the product has reached the end of its working life it should be disposed of separately from other waste. The user should, therefore, take the remote control to a specialised collection centre for electronic and electrical waste, or hand it over to the dealer when purchasing a new similar remote control, on a one to one basis. Correct separated collection for subsequent recycling, processing and environmentally compatible disposal contributes in preventing possible negative effects on the environment and on health and favours the recycling of the materials used in producing the remote control. Improper disposal of the product by the user leads to application of the penalties as per legislative decree no. 22/1997 (article 50 and following of decree no. 22/1997).